

In areas of high humidity where solid sheathing is required, here are some installation options to consider:

Option 1:

Apply **Certi-Last®** pressure-impregnated treated shakes or shingles directly to the sheathing. (See Figure 21a).

Option 2:

Apply vertical strips over the sheathing in alignment with the rafters below, then place horizontal furring strips on top of the vertical boards. (See Figure 21b).

Note:
Incorporating any type of ventilation system with Certi-Last® shakes or shingles will provide a more robust installation.
Good ventilation is essential. Ridge and soffit vents are recommended.

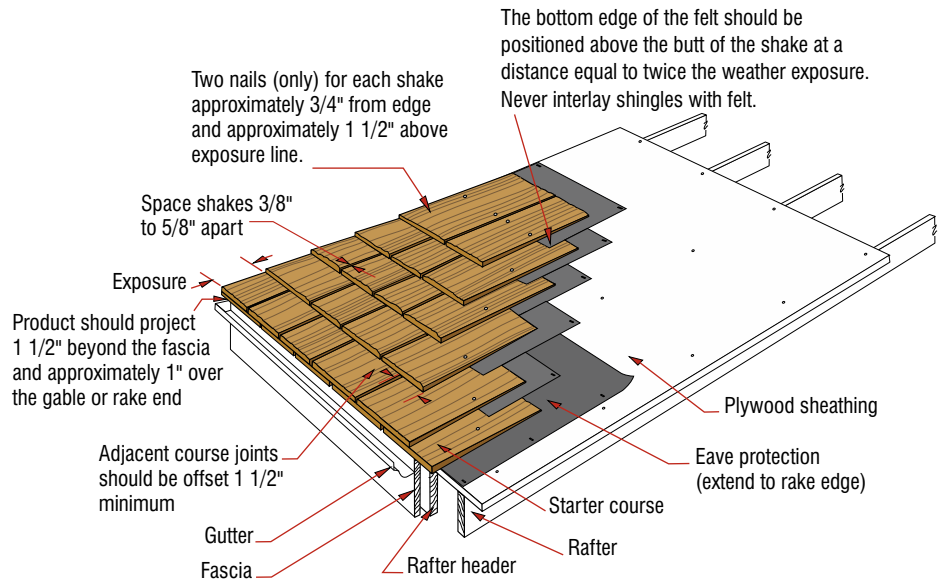


Figure 21a: Certi-Last® Shake Application (Option 1 Depicted)

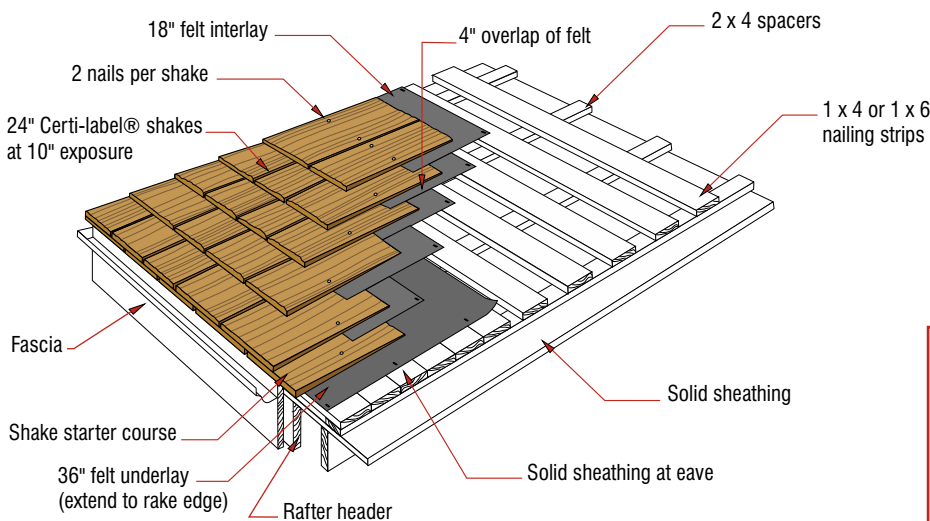


Figure 21b: Vertical Strips Over Solid Sheathing Application (Option 2 Depicted)

Note: The above figures are depicting a shake application - **Do not interlay shingles with felt.**