

In areas of high humidity where solid sheathing is required, here are some installation options to consider:

Option 1:


Apply Certi-Last® pressure-impregnated treated shakes or shingles directly to the sheathing (See Figure 21a).



NOTE:

- Incorporating any type of ventilation system with Certi-Last® shakes or shingles will promote a more robust installation.
- Good ventilation is essential. Ridge and soffit vents are recommended.


Figure 21a: Certi-Last® Shake Application (Option 1 Depicted)

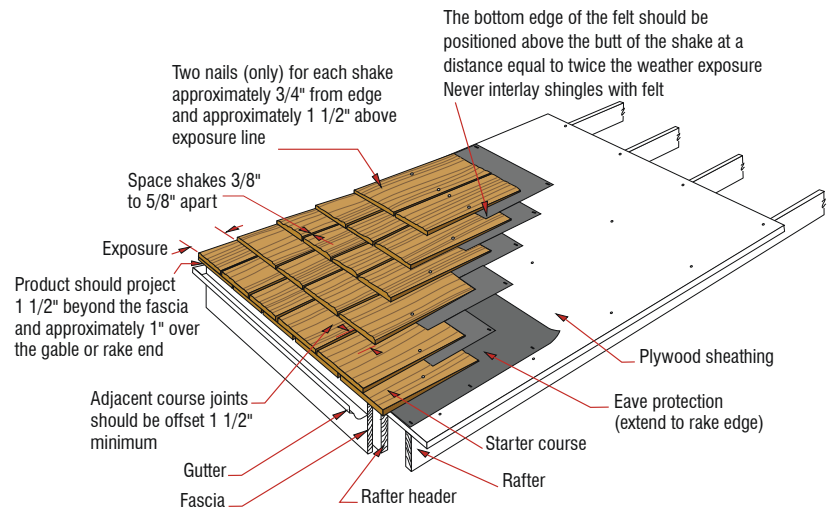

Option 2:

Apply vertical strips over the sheathing in alignment with the rafters below, then place horizontal furring strips on top of the vertical boards (See Figure 21b).

Figure 21b: Vertical Strips Over Solid Sheathing Application (Option 2 Depicted)

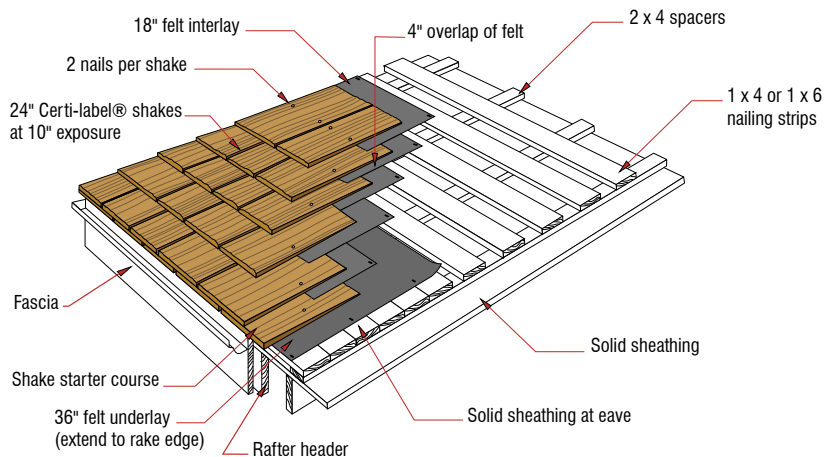

NOTE:

- The above figures are depicting a shake application - **DO NOT INTERLAY SHINGLES WITH FELT.**



Courtesy: Serpentine Cedar Ltd.; Rowena's Inn on the River

Photo shows Certi-label® Western Red Cedar installation