

Valleys: Certi-label Shingles

For roofs with slopes of 45° or greater, valley flashing should extend not less than 203mm on each side of the valley centerline. For roof slopes less than 45°, flashing should extend not less than 279mm each side. Valley flashing should be center-crimped, painted, galvanized steel or aluminum. Valley metal should be underlaid with minimum Type 30 ASTM Designation 226 (ASTM D 226) or ASTM Designation 4869 (ASTM D 4869) roofing felt. Shingles should not be applied with their grain parallel to the valley centerline and those extending into the valley should be cut at the correct angle (Figure 13b).

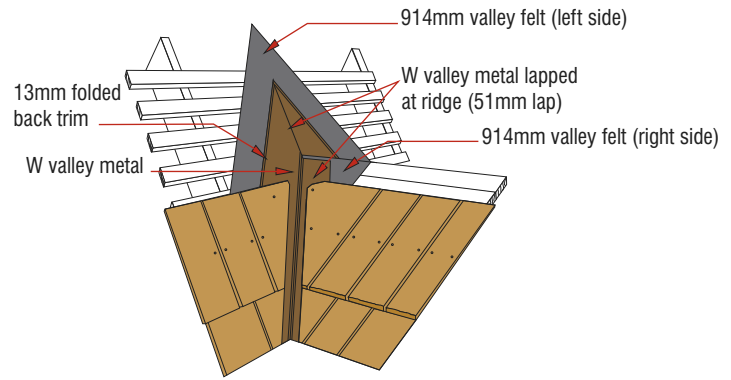


Figure 13b: Typical Saddle Flashing Detail

Valleys: Certi-label Shakes

On shake roofs it is recommended that a strip of Type 30 ASTM Designation 226 (ASTM D 226) or ASTM Designation 4869 (ASTM D 4869) roofing felt be installed over the sheathing and under the metal valley. Metal valleys should be center-crimped, painted, galvanized steel or aluminum and should extend not less than 279mm on each side of the valley centerline. In some areas, however, flashing width requirements may differ and local building codes should be consulted. Shakes should not be applied with their grain parallel to the valley centerline and those extending into the valley should be cut at the correct angle (Figure 13c).

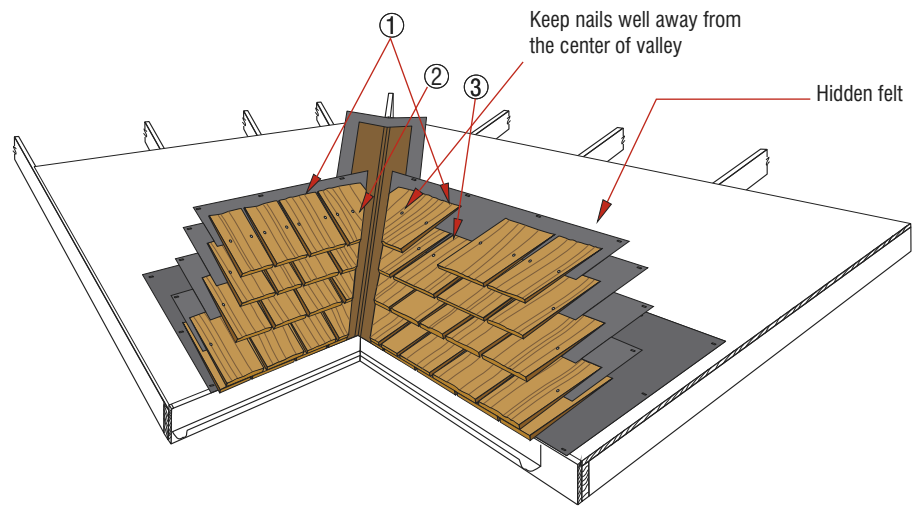
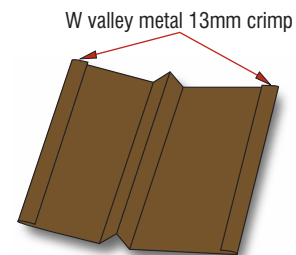


Figure 13c: Valley Product Application

Order of applying Certi-label shakes or shingles at valley:

1. Stop course line here
2. Place pre-cut valley piece so that cut-angle is positioned on the valley guide chalk line with tip on the course line.
3. Select product of the required width to complete the course of Certi-label shakes or shingles.



**Figure 13d:
Roof Valley Flashing Detail**

**Figures 13a-13d: Flashing Details
for Shake and Shingle Valleys**